USER'S GUIDE

V:1230-0817-11

ISP301B

Speaker System for iPod + iPhone

For the most up-to-date version of this User's Guide, go to **www.ilive.net**

Warnings and Precautions

- **CAUTION**: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.
- **WARNING:** To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.
- **AVERTISSEMENT:** Pour réduire le risque d'incendie ou de choc électrique, ne pas exposer cet appareil sous la pluie et l'humidité.
- **CAUTION:** Use of any controls or adjustments or performance of procedures other than those herein specified may result in hazardous radiation exposure.
- **WARNING:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- **WARNING:** Do not place the unit on top of any soft, porous, or sensitive surfaces to avoid damaging the surface. Use a protective barrier between the unit and surface to protect the surface.
- **WARNING**: Shock hazard - Do Not Open.
- ***AVIS**: RISQUE DE CHOC ÉLECTRIQUE - NE PAS OUVRIR*

  Mains Plug or Direct plug-in adapter is used as disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the mains completely, the Mains Plug or Direct plug-in adapter should be disconnected from the mains socket outlet completely.

  La fiche d'alimentation ou adaptateur de courant est utilisé comme dispositif de déconnexion et doit rester accessible pendant l'utilisation. Pour mettre l'appareil hors tension, la fiche ou adaptateur de courant doit être débranché de la prise de courant.

  Do not mix old and new batteries.
  Do not mix alkaline, standard (carbon-zinc), or rechargeable (ni-cad, ni-mh, etc) batteries.
  No mezcle baterías viejas y nuevas.
  No mezcle baterías alcalinas, estándar (carbono-zinc) o recargables (ni-cad, ni-mh, etc.).

WARNING: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

WARNING: The remote control supplied with this product contains a button-cell battery that could be accidentally ingested by children. Do not leave button-cell batteries accessible to children. If swallowed, promptly see doctor and call (202) 625-3333.

Important Safety Instructions

1. Read these Instructions.
2. Keep these Instructions.
3. Heed all Warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with a dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding - type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.

12. Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.

13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

Special note: When placing your unit on a lacquered or natural finish, protect your furniture with a cloth or other protective material.

FCC Warnings

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Additional Warnings

- The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on apparatus.
  L'appareil ne doit pas être exposé aux écoulements ou aux éclaboussures et aucun objet ne contenant de liquide, tel qu'un vase, ne doit être placé sur l'objet.
- Battery shall not be exposed to excessive heat such as sunshine, fire or the like.
  Les piles ne doivent pas être exposées à de forte chaleur, tel qu'à la lumière du soleil, au feu ou autres choses de semblable.
- Caution marking is located at the rear or back of the apparatus.
  Attention marquage est situé à l'arrière ou à l'arrière de l'appareil
- The marking information is located at the rear or back of apparatus.
  Les informations de marquage est situé à l'arrière ou à l'arrière de l'appareil.

This symbol indicates that this product incorporates double insulation between hazardous mains voltage and user accessible parts.

Speaker System for iPod + iPhone

Features

- Made for iPod and iPhone
- Plays and charges docked iPod and iPhone
- iPod and iPhone authentication IC
- Composite video output
- 3.5mm audio input
- Blue LED light effects
- Built-in speaker
- Last volume settings memory
- Cloth speaker grill
- Remote Control
- DC power input: requires an AC/DC power adapter (included)

Included

- AC/DC power adapter
- Remote control: requires a CR2025 battery (pre-installed)

Table of Contents

Speaker System for iPod + iPhone 4
Features
Included

Table of Contents 5

Introduction 6

Setup 8
Power
Remote

iPod and iPhone 9
Docking an iPod or iPhone
Playing a Docked iPod or iPhone
Rotating a Docked iPod or iPhone

3.5mm Audio Input 10
Using the 3.5mm Audio Input

Composite Video Output 11
Using the Composite Video Output

Company Information 12
International Support
Contact Information
Green Initiative

Introduction

Power
Press to turn the speaker off or on.

Volume
Press to adjust the volume on the speaker.

Dock for iPod and iPhone

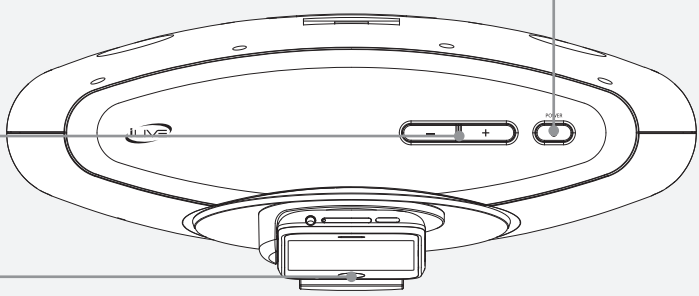

Dimmer
Use to adjust the light effects to Hi, Low, or Off.

Composite Video Output

3.5MM Audio Input

DC Power Input
Requires an AC/ DC power adapter (included)

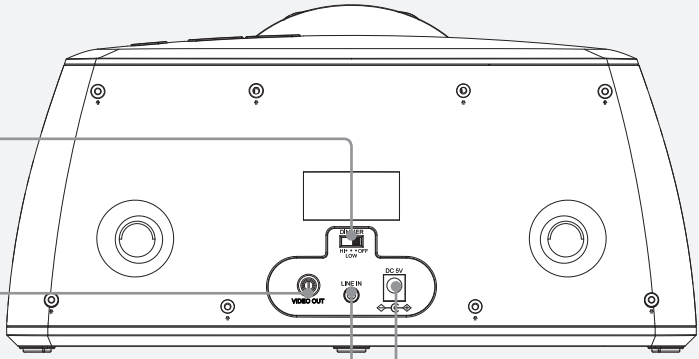

Power
Press to turn the speaker off or on.

Select
Press to make selections on a docked iPod or iPhone.

Menu
Press to move through the menus on a docked iPod or iPhone.

Skip
Press to skip between tracks on a docked iPod or iPhone.

Repeat
Press to repeat a track on a docked iPod or iPhone.

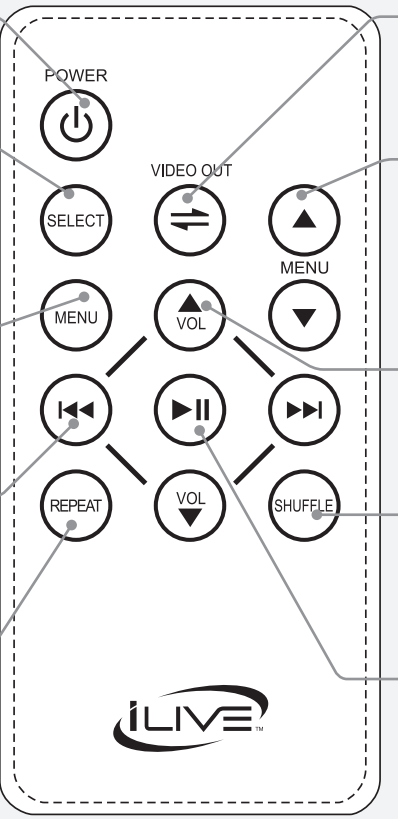

Video Out
Press to output video from a docked iPhone or iPod Touch.

Menu Up/Down
Press to scroll through selections on a docked iPod or iPhone.

Volume
Press to adjust the volume on the speaker.

Shuffle
Press to activate or deactivate the shuffle mode on a docked iPod or iPhone.

Play/Pause
Press to play or pause a docked iPod or iPhone.

Setup

Power

DC Power Input: Requires an AC/DC power adapter (included)

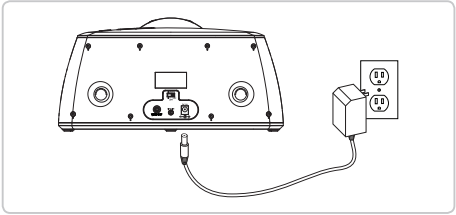

Remote

Requires 1 CR2025 battery (pre- installed)

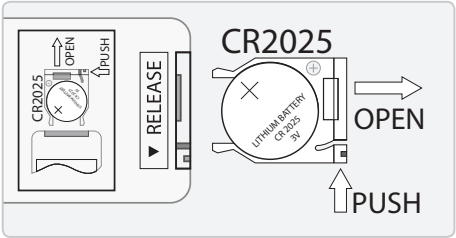

iPod and iPhone

Docking an iPod or iPhone

1. Connect the iPod or iPhone to the connector inside the Dock for iPod and iPhone.
2. When the speaker is plugged in, using AC power, the docked iPod or iPhone will charge.

Playing a Docked iPod or iPhone

1. Follow the instructions for Docking an iPod or iPhone.
2. Press the **Power** button to turn the speaker on.
3. Use the native controls on the docked iPod or iPhone to begin playing music through the connected speaker.

Rotating a Docked iPod or iPhone

1. Follow the directions for Docking an iPod or iPhone.
2. After your iPod or iPhone is docked, the dock on the speaker can be rotated 90˚.

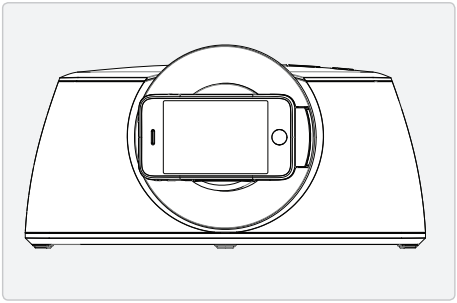

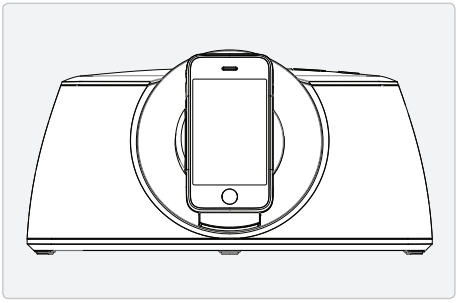

3.5mm Audio Input

Using the 3.5mm Audio Input

Requires a 3.5mm audio cable (not included)

1. Connect a 3.5mm audio cable to the **3.5MM Audio Input** on the speaker and an audio output on an MP3 player or other audio source.

   Playing music from a docked iPod or iPhone is disabled when a 3.5mm audio cable is connected to the speaker.

2. The speaker will automatically switch to line input mode.

3. Use the native controls on the connected MP3 player or other audio source to play and control audio played through the speaker.

Composite Video Output

Using the Composite Video Output

Requires an RCA composite video cable (not included)

1. Connect the RCA composite video cable to the **Composite Video Output** on the speaker and a composite video input on a television.
2. Press the **Video Out** button on the remote.

   Video Out button only compatible with iPhone and iPod touch. For all other models, locate the TV Out setting in iPod Settings to turn the feature on or off.
3. Adjust the **TV OUT** settings on the docked iPod to **OK**.
4. Videos played from the docked iPod or iPhone will now play on the connected television.

Company Information

International Support

To download this User's Guide in English, Spanish, or French, visit the support section at www.ilive.net.

Para transferir esta guía de usuario en inglés, español, o francés, visite la sección de la ayuda en www.ilive.net.

Pour télécharger ce guide de l'utilisateur en anglais, espagnol, ou français, visitez la section de soutien chez www.ilive.net.

Contact Information

Phone: 1-888-999-4215
Email: customerservice@ilive.net
Parts Email: partsinfo@dpi-global.com
Website: www.ilive.net

Green Initiative

Environmental Commitment to 'Protect for Today and Sustain for Tomorrow'

2009 marked the official launch of DPI, Inc.'s corporate campaign for a greener and cleaner world. DPI is building upon environmental initiatives introduced at all of their facilities to help formulate and sustain significant and important conservation efforts within its manufacturing and marketing communities. In addition to targeting and selecting energy efficient product features, and structuring 'green office' procedures, other initial program efforts include:

- Reduction of all packaging sizes
- Recyclable plastics for clamshell packages, with a plan to eventually replace plastic with recyclable paper
- Recycled fiber board in place of the polyfoam in packing boxes
- Recycled plastics in place of the virgin material in product construction

Copyright © 2010 Digital Products International (DPI, Inc.) | All other trademarks appearing herein are the property of their respective owners. Specifications are subject to change without notice